RHL-ACR, RHL-ALR, RHL-ACFR

Installation Instructions



IMPORTANT SAFEGUARDS READ AND FOLLOW ALL SAFETY INSTRUCTIONS.

When using electrical equipment, basic safety precautions should always be followed including the following:

- DISCONNECT AC POWER SUPPLY BEFORE SERVICING.
- Installation and servicing of this equipment should be performed by qualified service personnel only.
- Ensure that the electrical wiring conforms to the National Electrical Code NEC® and local regulations if applicable.
- · Do not mount near gas or electrical heaters.
- Equipment should be mounted in locations and at heights where it will not be readily subjected to tampering by unauthorized personnel.
- The use of accessory equipment not recommended by the manufacturer may cause an unsafe condition.
- Any modification or use of non-original components will void the warranty and product liability.
- Do not use this equipment for other than intended use.

SAVE THESE INSTRUCTIONS!

Technical Support ■ (623) 580-8943 ■ technical support@barronltg.com



RHL-ACR, RHL-ALR, RHL-ACFR





Refractor/Reflector Installation Instructions

- 1. Start this installation after the fixture is completely installed, secure and powered off.
- 2. Find the (3) mounting screws and (3) washers from Refractor/Reflector packaging.
- 3. Install the Refractor/Reflector to the lower surface of the fixture. Align the (3) mounting holes of the Refractor/Reflector with the corresponding mounting holes on the RHL fixture (Fig. 1).
- 4. Secure Refractor/Reflector to the fixture with (3) Refractor/Reflector mounting screws and washers. Use thread locking liquid (supplied by others) (Fig. 2).
- 5. Check security.
- 6. Installation complete.



